

### TRU-ALERT Height Sensor Quick Reference Chart

LED Color	LED State	Speaker State	Height Sensor State	
Green	Slow Flash	Single Beep, then none	Normal Mode - Paired	
Green	Quick Flash	Single Beep, then none	Normal Mode - Unpaired	
Green	Solid	none	Bootloader Mode	
Blue	Pulsing	none	Charging	
Blue	Solid	none	Fully Charged	
Purple	Pulsing	Two Beeps, then none	Pause Mode	
Purple	Flashing	none	Paired Device Identification	
Yellow	Pulsing	4x Chimes, then none	Suspend Mode	
Yellow	Slow Flash	Single Beep, then none	Low Battery - Normal Mode - Paired	
Yellow	Quick Flash	Single Beep, then none	Low Battery - Normal Mode - Unpaired	
Red	Slow Flash	Slow Chirp	Height Warning	
Red	Quick Flash	Continuous Chirp	Safety Alarm	
Red	Slow Flash	6 Beeps, then none	Critically Low Battery	
Red	Yellow	Slow Flash	none	Internal Error
Blue	Green	Quick Flash	Paired Audio	Pair Complete
Blue	Red	Quick Flash	Unpaired Audio	Unpair Complete

### TRU-ALERT Reset Remote Quick Reference Chart

LED Color	LED State	Speaker State	Height Sensor State	
Green	Solid	none	Bootloader Mode	
Blue	Solid for 4 sec	none	Broadcasting Reset Signal	
Blue	Pulsing	none	Charging	
Blue	Solid	none	Fully Charged	
Purple	Solid for 4 sec	none	Broadcasting Pause Mode Signal	
Yellow	Solid for 4 sec	none	Broadcasting Reset Signal - Low Power	
Yellow	Pulsing	none	Broadcasting Suspend Mode - On Signal	
Amber	Pulsing	none	Broadcasting Suspend Mode - Off Signal	
Red	Slow Flash for 4 sec	6 Beeps, then none	Critically Low Battery	
Red	Yellow	Slow Flash	none	Internal Error
Blue	Green	Quick Flash	none	Pairing In-Process
Blue	Red	Quick Flash	none	Unpairing In-Process